

Design and Operational Guidelines for Purolite® A532E: Perchlorate Ion Exchange Resin for Drinking Water Systems

Learn to remove perchlorate from water for
remediation or drinking water.



Purolite®



Puro-lite®

About Puro-lite

Puro-lite is a leading manufacturer of ion exchange, catalyst, adsorbent and specialty resins. With global headquarters in the United States, Puro-lite is the only company that focuses 100% of its resources on the development and production of resin technology.

Responding to our customers' needs, Puro-lite has the widest variety of products and the industry's largest technical sales force. Globally, we have five strategically located research and development centers and eight application laboratories. Our ISO 9001 certified manufacturing facilities in the United States of America, United Kingdom, Romania and China combined with more than 40 sales offices in 30 countries ensure complete worldwide coverage.




PREMIER PRODUCTS

The quality and consistency of our products are fundamental to our performance. Throughout all Puro-lite plants, production is carefully controlled to ensure that our products meet the most stringent criteria, regardless of where they are produced.



RELIABLE SERVICE

We are technical experts and problem solvers. Reliable and well-trained, we understand the urgency required to keep businesses operating smoothly. Puro-lite employs the largest technical sales team in the industry.



INNOVATIVE SOLUTIONS

Our continued investment in research and development means we are always perfecting and discovering innovative uses for ion exchange resins and adsorbents. We strive to make the impossible possible.

Design and Operational Guidelines for Purolite A532E: Perchlorate Ion Exchange Resin for Drinking Water Systems

Contents

Introduction	3
Modeling	4
Pretreatment	6
Resin Vessel Design	8
Vessel Configuration	9
Post-Vessel Design	9
Operational Considerations	9
Troubleshooting	15

Introduction

Perchlorate is a significant health issue, particularly in the USA. Trace parts per billion levels have been detected in potable water supplies in at least 22 states. Even though the US EPA has yet to set a maximum containment level (MCL), perchlorate is now regulated by several states at maximum levels ranging from 1 ppb to 6 ppb.

Purolite offers a comprehensive line of single-use and regenerable resins for perchlorate removal. Below is a listing of Purolite's resins used for remediation of contaminated ground or potable water:

- [Purolite A532E](#): Single-use "load & burn"
- [Purolite A532EBF](#): Buffered version of Purolite A532E
- [Purolite A530E](#): Single-use or regenerable*
- [Purolite A520E](#): Single-use or regenerable*
- [Purolite A850](#): Brine regenerable

* Regeneration is possible using a tetrachloroferrate process patented by Oak Ridge National Laboratories and available from third parties.

While several resin technologies can treat perchlorate, both single-use ion exchange and regenerable, single-use resins have largely replaced regenerable systems because customers require a certificate of destruction that comes when the resin is incinerated. In a spent regenerant, perchlorate has not been destroyed, and can spread the contamination to another location. Single-use perchlorate selective resins have become standard in perchlorate treatment.

Purolite A532E is the main workhorse for perchlorate and the focus of this application guide.

Advantages of Purolite Ion Exchange Resins for Perchlorate Removal

- Low operating cost with simple system design, requiring minimum operator attention.
- Purolite can provide throughput breakthrough modeling with our proprietary simulation program.

- Customizable solution for simultaneous removal of other oxyanions.
- Turnkey resin exchange services including resin preparation and, in some cases, disposal of spent resin.
- Disposal via waste-to-energy incineration allows for destruction of the perchlorate and the generator receives a certificate of destruction.



Purolite bulk resin tanker delivers perchlorate selective resin to a site in California

Modeling

The first step to designing a system is to work with Purolite to model the throughput of a system. With the following water chemistry, Purolite's proprietary modeling will help you determine the operational costs:

TABLE 1 Water Chemistry Requested for Perchlorate Throughput Modeling

Description	Units	Influent Water			Treatment Goal
		Min	Avg	Max	
● Operational Flow Rate	gpm	___	___	___	
● Operational Schedule	hours/day	___	___	___	
● Daily Volume (Average)	gallons	___	___	___	
● Alkalinity (as CaCO ₃)	mg/L	___	___	___	
● Chloride	mg/L	___	___	___	
● Sulfate	mg/L	___	___	___	
● Nitrate (as NO ₃)	mg/L	___	___	___	
● Nitrate (as N)	mg/L	___	___	___	
Fluoride	mg/L	___	___	___	
Silica SiO ₂	mg/L	___	___	___	
Carbon Dioxide (CO ₂)	mg/L	___	___	___	
● Perchlorate	ppb	___	___	___	_____
Arsenic	ppb	___	___	___	
Hexavalent Chromium	ppb	___	___	___	
Uranium	ppb	___	___	___	
Calcium (as CaCO ₃)	mg/L	___	___	___	
Magnesium (as CaCO ₃)	mg/L	___	___	___	
Sodium	mg/L	___	___	___	
Potassium	mg/L	___	___	___	
● Iron	mg/L	___	___	___	
● Manganese	mg/L	___	___	___	
● pH		___	___	___	
● Total Dissolved Solids (TDS)	mg/L	___	___	___	
● Suspended Solids	mg/L	___	___	___	
● Oil & Grease	mg/L	___	___	___	
● Total Organic Carbon (TOC)	mg/L	___	___	___	

- = Data is critical for perchlorate rating
- = Data, if not provided, will be assumed non-detect (ND)

Pretreatment

TSS

Ion exchange resin can act as an absolute filter. Total suspended solids (TSS) removal is key to preventing blockage and subsequent channeling within the resin bed. TSS is likely the greatest cause of failure of single-use ion exchange resin. Proper design and operation of the prefiltration system to the resin is critical to success. This is because [Purolite A532E](#) typically operates for months to years before the resin is changed out and because backwashing of the resin during the service period is not allowed.

Backwashing can potentially mix perchlorate-loaded resin from the top of the resin bed with less-used resin at the bottom of the bed and cause premature breakthrough of perchlorate.

A particle size distribution analysis can be helpful in determining the size of incoming solids. If the well produces any sand, a de-sander is recommended. For all water:

- **Recommendation:** Use a 5-micron bag or cartridge filter before the resin. If high levels of suspended solids are expected that can quickly clog the 5-micron filter, consider installing a series of larger filters ahead of the 5-micron filter (for example, 25-micron followed by 10-micron followed by 5-micron). Base this on particle size distribution analysis.

Oil and Grease

Resin will be readily fouled by oil and grease – remove these completely before the water makes contact with the resin. Organo-clay media alone or in combination with oil-adsorbing bag filters are good choices. Get help from manufacturers of these devices to select the right ones for your specific need.

Dissolved Iron and Manganese

As a rule of thumb, these metals can precipitate on downstream media (e.g. resin, granular activated carbon (GAC) or membranes) especially when the iron concentration is above 0.5 ppm and manganese is above 20 ppb. Piloting may be necessary to determine the degree to which these minerals fall out of solution. Pretreatment may be needed for these metals.

- **Recommendation:** Use precipitative greensand or catalytic type media like [Purolite MZ10 Plus](#) to remove iron and manganese before the water contacts the resin.

These media are often used in conjunction with an oxidant like permanganate or chlorine. Oxidants will destroy the resin and must be removed before the water contacts the resin. *Remove all traces* of oxidants before the resin with either sodium bisulfite, sodium thiosulfate or GAC per manufacturer's instructions.

Oxidants

Prolonged contact of the resin with oxidants such as chlorine, chloramine, hypochlorite, permanganate and ozone will destroy the resin and also increase the potential for nitrosamine formation in the effluent water.

- **Recommendation:** *Remove all traces* of oxidants before the resin with either sodium bisulfite, sodium thiosulfate or GAC per manufacturer's instructions.

Scaling

When the Langelier Saturation index (LSI) of the water is positive, calcium carbonate scaling can occur. A slightly positive LSI (e.g. +0.2 to +0.5) can form a beneficial thin film of calcium carbonate on the distribution pipework that can protect against corrosion. If an air stripper is used to remove carbon dioxide (CO₂) from the water, the pH of the effluent water will generally increase; this can sometimes turn the LSI from a negative to a positive value. If the LSI becomes too positive (e.g. +1 to +2), excessive scaling can occur – scale precipitation on resin beads and vessel internals will degrade overall system performance.

- **Recommendation:** Determine the LSI based of the water. If the LSI is too positive or can become positive after a pretreatment step, consider feeding an acid to prevent scaling.

Microbes

Bacteria are sometimes found in groundwater and in equipment in contact with the water – this makes it difficult to achieve negative BAC-T counts in the water exiting the resin vessel. Careful investigation should be done to determine the source – besides the well, other sources of bacterial contamination can include dead legs in the piping or improper application of gasket lubricant. If the well is determined to be the source:

- **Recommendation:** Disinfect the inlet well water with a UV disinfection unit. Solids filtration can be used to filter out biomass after a UV. Alternatively, use an oxidant and refer to the oxidants section above.

TOC

Total organic carbon (TOC) can foul and negatively impact resin performance — the extent of fouling depends on the molecular weight distribution of the TOC and its anionic characteristics. TOC in groundwater usually ranges from 1 to 2 ppm or less. At higher levels, the throughput of [Purolite A532E](#) will be negatively affected.

- **Recommendation:** Use GAC or a brine regenerable organic-scavenger resin like [Purolite A502P](#), [Purolite A860](#), or [Purolite Tanex™](#) resins before the Purolite A532E to significantly improve the throughput of the resin when TOC exceeds 2 ppm.

VOC

Volatile organic carbon (VOC) generally will not affect Purolite A532E throughput. If removal of VOC is needed, GAC can be used with an EBCT of approximately 5 minutes (check with your GAC provider for guidance).

- **Recommendation:** If perchlorate and VOC co-exist in the water, use GAC treatment for VOC removal before the Purolite A532E. If TOC is also present, the GAC can help protect the resin against potential TOC fouling.

Resin Vessel Design

Below are the critical elements for vessel design to treat perchlorate using Purolite A532E resin:

- **Bed Depth:**
 - 3 ft (0.91 m) minimum up to 12 gpm/ft² (30 m/h)
 - 3.7 ft (1.1 m) minimum above 12 gpm/ft² (30 m/h) design flows
- **Linear Velocity:** Design goal = 6 to 18 gpm/ft² (15 to 45 m/h)
- **Specific Flowrate:** Design goal = 1 to 5 gpm/ft³ (8 to 40 BV/h)
- **Empty Bed Contact Time (EBCT):** Design goal = 1.5 to 2.5 minutes contact time for the lead resin bed

Preferably, vessel design should also include both a side manway and a top manway. These make it easier to inspect the vessel and resin bed.

Vessel Configuration

Although perchlorate treatment goals are achievable with a single vessel, a lead-lag pair of vessels recommend for several reasons. Operational costs will be lower with lead-lag design because the lead vessel will be allowed to operate for a significantly longer period while the lag is still at non-detect. Longer run time allows for more efficient use of resin.

Post-Vessel Design

Inline installation of a “witch’s hat” type strainer or basket strainer on the vessel effluent can help catch escaped resin beads in case there is a screen failure in the outlet distributors.

Installation of check valves after the treatment system will ensure water does not flow backwards into the vessel and disrupt the mass transfer zone of the resin bed.

Operational Considerations

Startup

Before loading, disinfect all vessels and piping as per [“AWWA C653-13 Disinfection of Water Treatment Plants.”](#) Rinse equipment to remove all chlorine residuals to avoid destruction of the resin beads.

A food-grade wash out must be done on slurry trucks and hoses before resin is loaded in them.

Rinse the [Purolite A532E](#) as per the NSF/ANSI-61 guidelines using at least 20 bed volumes of water (150 gallons per cubic foot of resin) before sending drinking water to the distribution system. Offsite resin rinsing can often be done by service providers before installation. In such cases, minimal onsite rinsing is needed.

Fill vessels partially with water (e.g. 1/3 of volume) to provide a “water cushion” as the resin is slurried into the vessel. This helps to level the resin bed as it is loaded.

Slurry load the Purolite A532E to prevent bacterial contamination.

During startup of a new resin bed, nitrosamine sampling is sometimes recommended by regulators. Nitrosamines are not in the resin but can be formed when nitrosamine precursors make contact with chlorine or other oxidants. Rinsing the resin is generally enough to eliminate this issue.

BAC-T sampling is also recommended before sending water to distribution.

When starting up a [Purolite A532E](#) system, whether on the first load, or in a start/stop scenario, ramp up the flow slowly either by using a variable flow drive (VFD) on the well pump or a control valve that slowly diverts flow from waste to treatment. Water hammer, or instantaneous water flow changes, can cause resin movement and disruptions in the bed. As a rule of thumb, the ramp-up time should be about five minutes from start to full flow.

Purolite A532EBF for Minimal Water Chemistry Changes


One major drawback of anion exchange resin systems at startup is that they simultaneously remove alkalinity, sulfate and other anions in exchange for chloride. Buffered resin can reduce the effects of water chemistry changes at startup by:

- Preventing effluent chloride from approaching or exceeding local discharge standards
- Preventing high chloride to sulfate mass ratio (CMSR) which can create the potential for leaching of lead in piping systems
- Stabilizing effluent pH and meet local discharge standard

Using a buffered resin like [Purolite A532EBF](#) can result in significant savings versus a standard resin, reducing both rinse time and wastewater volumes generated.

FIGURE 1

Typical Elution Profile of A532EBF at Startup Compared to Non-Buffered Version

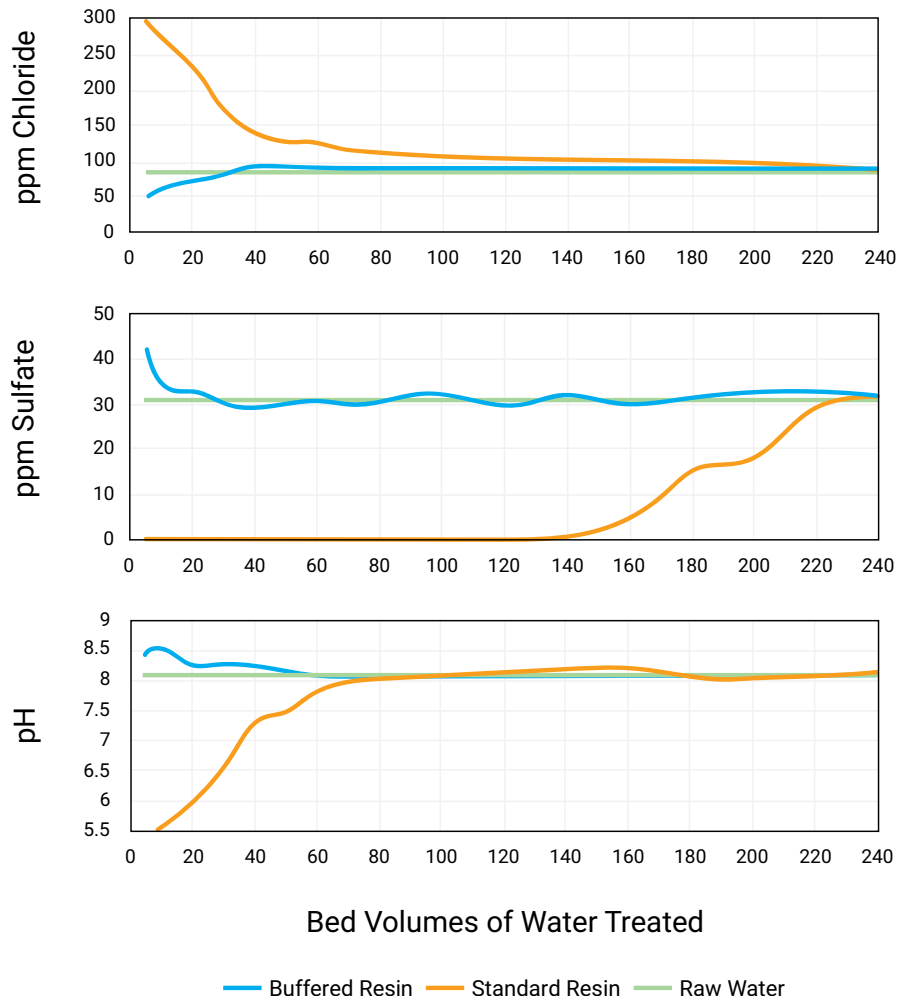

Sampling

Perchlorate sampling protocols can be provided by your analytical laboratory — be sure to check with them before starting any sampling regime.

[Purolite A532E](#) throughput is determined largely by the competing anions present in the influent water.

Influent Water Testing

Sample monthly for all anions to monitor if there are significant changes in water chemistry (e.g. 5 percent or greater). Check at least for the following in the influent water:

- Perchlorate
- Sulfate
- Nitrate
- Alkalinity
- Chloride
- Total Organic Carbon
- Total Dissolved Solids

Midpoint and Effluent Sampling

- Sample weekly for perchlorate to ensure proper treatment.
- The midpoint sample point is defined as the effluent of the lead bed. This data point provides the “trigger point” information as to when a resin exchange is required. This trigger point will be set by the relevant regulating agency.
- Sample the discharge point of the treatment train to ensure the treatment goal is being achieved.

Monitoring

Once the vessels are properly configured in a lead-lag arrangement, no changes are required to the valving until the resin is ready to be exchanged. Rounds and readings are recommended three times a week.

Monitor the following critical parameters:

- Flow rates
- Meter readings
- Pressure levels in and out of each vessel to determine pressure drop – or readings from a differential pressure (dP) cell
- Other operational items to check routinely include:
 - Proper valve positioning. Some water purveyors install locks to ensure valving is not changed.
 - Air-relief valves can sometimes leak. Throttling them open and closed can dislodge a particle that causes leakage.

Resin Exchanges

Before refilling of fresh resin into a vessel that previously contained spent resin, it is critical to remove all spent resin and to visually inspect and confirm that no spent resin is left behind as this will compromise the operating capacity during the next service cycle. Visual inspection of the vessel and internal distribution systems must be done to confirm equipment integrity as well as to confirm that no resin beads or pieces of beads are wedged in the distribution slots – any such defects must be corrected before the vessel is returned to service. It should be noted that reduction of contaminants at parts per trillion levels to non-detect levels, requires a lot of precision to ensure success. It is highly recommended that detailed photographs of the inspected sections of the vessel be taken and stored as verification that this has been properly done for each vessel.

Before return to service, the vessel and its associated plumbing and valves should be sanitized for use in drinking water treatment using a customer-approved procedure.

After completion of above task, a fresh charge of resin can then be loaded into the empty vessel using a customer-approved procedure, taking all precautions to prevent contamination of the resin from direct handling and/or exposure to contaminants that will foul and impair its operating efficiency (e.g. oil, grease, sweat, soil).

The vessel with the fresh resin is then placed in the lag (or polishing) position while the former lag vessel is placed into the lead position (not physically but) by opening and closing of appropriate valves. After settling of the fresh charge of resin, the resin bed is rinsed to drain using our recommended procedure.

Starting and Stopping a System

As mentioned previously, water hammer should be avoided to prevent resin movement. Flow should be ramped down when stopping and ramped up when re-starting.

If a system needs to sit idle, generally there are no issues with turning a well on and off over the course of a day. Warmer weather conditions are more conducive to bacteria growth. Consider these guidelines for preventing bacterial growth:

- If a vessel is idle more than 24 hours, at least two bed volumes of water should be rinsed through the vessel every day or two.
- If a vessel is idle for longer periods or where periodic rinsing is not feasible, the water should be completely drained from the vessel. When the vessel is ready to be started up, rinse the resin at full flow for 24 hours – this should be enough to flush out any bacteria. Pull BAC-T samples to confirm.

Conditions to Avoid!

If properly run and maintained, resin beds enjoy long and hassle-free life. In order to prevent upsets, ensure these factors are addressed:

- Oxidants like chlorine will destroy the resin as well as cause nitrosamines to form. Influent water should therefore be oxidant-free.
- Water hammer should be avoided. Ramp-up and ramp-down procedures should be in place.
- Entrained air in the influent water may cause bubble formation and subsequent resin movement.
- Any solids need to be removed before the resin as discussed in the pretreatment section. Solids can include suspended solids, precipitated solids (iron, for example) or biological growth.
- Interfering contaminants in the influent water include fuels, solvents, oils and surfactants. Each of these have the potential to negatively impact resin performance by breaking down the resin or blinding off its active sites.
- Resin loss, although obvious, can be detrimental to the performance of a bed.
 - Ensure the manifold valves are configured properly before starting up.
 - Excessive backwashing can displace resin. Backwashing is not recommended.
 - Broken effluent screens can cause resin loss. Secondary resin retention screens – basket strainers or witch’s hats – are recommended.

- Backwashing of the resin is not recommended after startup (and not required before startup). If a system is backwashed, either intentionally or through a leaking valve, the mass transfer zone of contamination is mixed and can lead to premature breakthrough.

Troubleshooting

Keeping good records is the first step to understanding where a problem originates. Follow the sampling and monitoring guidelines above.

Premature Breakthrough

Diagnosing system operating problems before they lead to premature breakthroughs is critical in achieving good results. Adequate monitoring and sampling protocol should be set up and followed. Operators should pay attention to any sudden changes in influent water characteristics or operation of upstream pretreatment equipment, any fouling or loss of resin or any of the above-mentioned parameters.

Solids buildup in the vessel:

- If dirt accumulates in the vessel, the influent water will find the path of least resistance. As this path is established, the water will push dirt-encrusted resin out of the way. This results in vessels channeling of the resin and early breakthrough.
- Visual inspection is the easiest way to verify solids buildup. Samples of resin can also be pulled from various spots in the vessel and tested for dirt accumulation.
- Pressure drop (dP) across the lead vessel is another indication of dirt accumulation. If dP increases excessively, a vessel inspection may be recommended. Take notice if pressures also go up and then suddenly reduce. That could indicate the resin bed has shifted.
- In some cases, if there is significant life remaining in the resin bed, the dirt layer on top can be removed, the bed can be leveled and the resin can be put back into use. This should be done with the help of a service provider to ensure proper equipment and sterilization procedures are used. The vessel should be tested for BAC-T before being put back into service.
- Prefilters should be inspected for tears or improper installation. Prefilters should be changed regularly – usually when the dP across the prefilter is 10 pounds per square inch.
- If prefilters are not compromised, it is possible the particles in the water are smaller than the micron rating of the filter. A particle size analysis of the influent water can be done to understand the filtration level required.

- Solids build-up can also come from dissolved metals like iron and manganese in the influent water. These metals can come out of solution, precipitate and foul the resin. Again, this can be diagnosed by sampling the resin bed and performing a resin analysis.
- Solids build-up can also occur if bacterial growth is occurring. Investigation of systems upstream from the resin bed should be analyzed to determine the source of the bacteria. See pretreatment recommendations.

Resin Movement

- A resin bed should be level to ensure plug flow through the vessel.
- Solids buildup, as discussed above, is the primary cause of resin movement.
- Water hammer can cause resin movement. Ensure ramp-up and ramp-down procedures are followed.
- Entrained air or excessive dissolved air in the influent water will cause resin movement. When the water hits the resin bed, there is a pressure drop causing air to come out of solution. As bubbles form on the resin bead, they can float to the top of the bed causing disruption of the mass transfer zone.
- If influent water distribution is either not designed effectively or is somehow damaged, influent water pressure can move resin around.
- Excessive backpressure can cause water to flow backward – especially in startup and shut down modes – causing the bed to get mixed and disturbing the mass transfer zone.
- Check valves should be installed after the treatment vessels to ensure water cannot flow backward.
- Backwashing of the vessel will cause disruption of the mass transfer zone and lead to premature breakthrough.

Water Chemistry Changes

Anion concentrations will affect the performance of the resin. Spikes in any of the influent anions will deplete resin capacity, causing less throughput than initially expected.

Resin Fouling

In addition to dirt and dissolved metals, resin can be fouled by organics in the water. Oil, grease, or surfactant will all blind the active surface of the resin bead. Solvents, fuels, or surfactants can impair the bead structure and cause performance issues. Resin sampling and analysis can diagnose these problems.

Resin Loss

When resin is not in the vessel, it cannot remove the perchlorate. Visual inspection should indicate if resin loss has occurred. Please note, resin will shrink as it exchanges chloride ions for other anions in the water. Expect up to 30% shrinkage of the bed from when it is first installed. Causes of resin loss include improper valving, broken screens or excessive backwashing.

Channeling

Channeling can occur as a result of too low a flow. Design flow should be between 6 to 18 gpm/ft². Between 4 to 6 gpm/ft², channeling may be a risk. Lower than 4 gpm/ft² will cause channeling issues which can lead to premature breakthrough.

Insufficient Removal of Spent Resin

If the resin is not completely removed in a resin exchange, the residual resin can cause early breakthrough.

High-Pressure Drop

- High dP across a vessel can most often be explained by dirt accumulation. See "[Solids buildup in the vessel](#)" content within the "Premature Breakthrough" section above.
- High dP across a vessel can also be explained by excessive resin fines clogging the effluent screens. Ensure screens are cleaned out during change-outs.
- High dP across a basket strainer or witch's hat can indicate a broken screen at the bottom of a vessel or excessive resin fines in the resin bed. Removing the strainer and inspecting its contents should help indicate what happened.



Purolite®

Algeria
Australia
Bahrain
Brazil
Canada
China
Czech Republic
France
Germany

India
Indonesia
Israel
Italy
Japan
Jordan
Kazakhstan
Korea
Malaysia

Mexico
Morocco
New Zealand
Poland
Romania
Russia
Singapore
Slovak Republic
South Africa

Spain
Taiwan
Tunisia
Turkey
UK
Ukraine
USA
Uzbekistan



Americas

Purolite Corporation
2201 Renaissance Blvd.
King of Prussia, PA 19406
T +1 800 343 1500
T +1 610 668 9090
F +1 800 260 1065
americas@purolite.com

EMEA

Purolite Ltd.
Unit D
Llantrisant Business Park
Llantrisant, Wales, UK
CF72 8LF
T +44 1443 229334
F +44 1443 227073
emea@purolite.com

FSU

Purolite Ltd.
Office 6-1
36 Lyusinovskaya Str.
Moscow, Russia
115093
T +7 495 363 5056
F +7 495 564 8121
fsu@purolite.com

Asia Pacific

Purolite China Co. Ltd.
Room 707, C Section
Huanglong Century Plaza
No.3 Hangda Road
Hangzhou, Zhejiang, China 310007
T +86 571 876 31382
F +86 571 876 31385
asiapacific@purolite.com

Purolite, the leading manufacturer of quality ion exchange, catalyst, adsorbent and specialty high-performance resins, is the only company that focuses 100% of its resources on the development and production of resin technology.

We're ready to solve your process challenges. For further information on Purolite products and services, visit www.purolite.com or contact your nearest Technical Sales Office.



www.purolite.com

©2021 Purolite Corporation
All rights reserved.
P-000234-NPOLD-1021-R3-ENG-PCO

The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, Purolite expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN. The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement.