

## PRODUCT DATA SHEET

# Purolite™ C104ECPlus

Polyacrylic Porous, Weak Acid  
Cation Resin, Hydrogen form,  
Potable Water Grade, Sugar Grade

## PRINCIPAL APPLICATIONS

- Dealkalization
- Deionization
- Softening
- Demineralization - Sugar solutions

## ADVANTAGES

- High operating capacity

## REGULATORY APPROVALS

- Kosher Certified
- Certified by the WQA to NSF/ANSI-61 Standard

## TYPICAL PACKAGING

- 1 ft<sup>3</sup> Sack
- 25 L Sack
- 5 ft<sup>3</sup> Drum (Fiber)
- 1 m<sup>3</sup> Supersack
- 42 ft<sup>3</sup> Supersack

## TYPICAL PHYSICAL & CHEMICAL CHARACTERISTICS:


Polymer Structure	Porous crosslinked polyacrylic acid
Appearance	Spherical Beads
Functional Group	Carboxylic Acid
Ionic Form	H <sup>+</sup> form
Total Capacity (min.)	4.7 eq/L (102.7 Kgr/ft <sup>3</sup> ) (H <sup>+</sup> form)
Moisture Retention	45 - 55 % (H <sup>+</sup> form)
Particle Size Range	425 - 1600 µm
< 425 µm (max.)	2 %
Reversible Swelling, H <sup>+</sup> → Ca <sup>2+</sup> (max.)	20 %
Reversible Swelling, H <sup>+</sup> → Ca <sup>2+</sup> (operating)	7% (approximately)
Reversible Swelling, H <sup>+</sup> → Na <sup>+</sup> (max.)	60 %
Specific Gravity	1.19
Shipping Weight (approx.)	740 - 780 g/L (46.2 - 48.8 lb/ft <sup>3</sup> )
Temperature Limit	120 °C (248.0 °F)

# Hydraulic Characteristics

## PRESSURE DROP

The pressure drop across a bed of ion exchange resin depends on the particle size distribution, bed depth, and voids volume of the exchange material, as well as on the flow rate and viscosity of the influent solution. Factors affecting any of these parameters—such as the presence of particulate matter filtered out by the bed, abnormal compressibility of the resin, or the incomplete classification of the bed—will have an adverse effect, and result in an increased head loss. Depending on the quality of the influent water, the application and the design of the plant, service flow rates may vary from 10 to 40 BV/h.


### PRESSURE DROP ACROSS RESIN BED

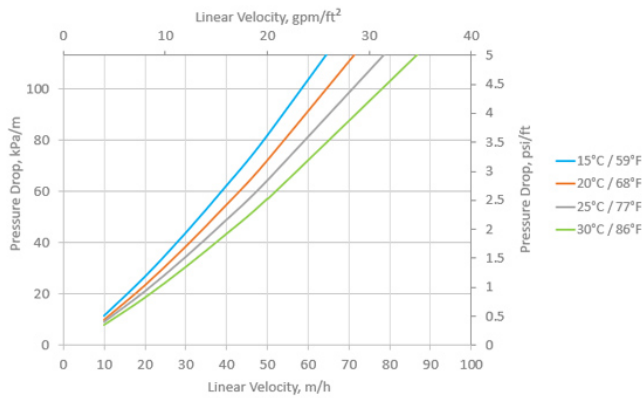

## BACKWASH

During up-flow backwash, the resin bed should be expanded in volume between 50 and 70% for at least 10 to 15 minutes. This operation will free particulate matter, clear the bed of bubbles and voids, and reclassify the resin particles ensuring minimum resistance to flow. When first putting into service, approximately 30 minutes of expansion is usually sufficient to properly classify the bed. It is important to note that bed expansion increases with flow rate and decreases with influent fluid temperature. Caution must be taken to avoid loss of resin through the top of the vessel by over expansion of the bed.

### BACKWASH EXPANSION OF RESIN BED

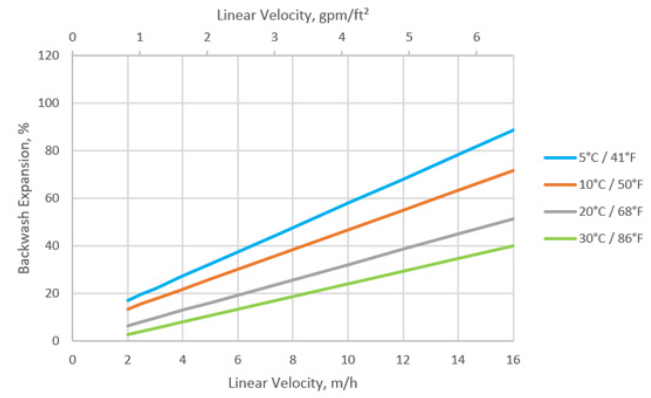

Ecolab is a global developer, manufacturer, and supplier of Purolite™ Resins including ion exchange, catalyst adsorbent and advanced polymers that make the world cleaner and healthier.

[www.puoliteresins.com](http://www.puoliteresins.com)



We're ready to solve your process challenges.

For further information on products and services, visit [www.puoliteresins.com](http://www.puoliteresins.com) or complete a Contact Us form via [PuoliteResins.com/contact-us](http://PuoliteResins.com/contact-us) or use the QR code.

Contact Us Form:



The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, Purolite expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN. The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement.